Home Decorators

—— Collection ——

BF-21893 HAMPTOM BAY COLLECTION LINEN CORNER CABINET

ASSEMBLY INSTRUCTIONS

Made In China

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts, which may have loose inside the carton during shipment. Once uppacked, compare all parts and hardware to the provided list to be sure all parts are present. If any parts or hardware are missing or damaged, please phone, e-mail or fax our Custormer service Department. For speady service, please provide your order number, item number and part number/letter of the part needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B BOTTOM PANEL-1PC	C LEFT SIDE PANEL-2PCS
D RIGHT SIDE PANEL-2PCS	E SHELF-2PCS	F DOOR-1PC
G ACROSS PANEL-1PC	H ACROSS PANEL-1PC	I ACROSS PANEL-2PCS
J  DRAWER PANEL FRONT-3PCS	K DRAWER PANEL SIDE-6PCS	M 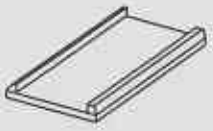 DRAWER PANEL BACK-3PCS

N 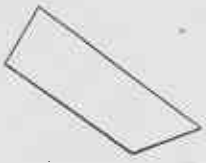 DRAWER PANEL BOTTOM-3PCS	O DRAWER SUPPORTS-6PCS	P FEET-3PCS
R MIDDLE LEFT SIDE PANEL-1PC	S MIDDLE RIGHT SIDE PANEL-1PC	T SCREWS-36PCS
U CAM-LOCKS-24PCS	V CAM-BOLTS-24PCS	W SCREWS-5PCS
X SCREWS-4PCS	Y SHELF SUPPORT-8PCS	Z HINGE-2PCS
A1 FEMALE MGANET-1PC	B1  DOWELS-3PCS	C1  MAGNET-1PC
D1 SCREWS-2PCS	E1 KONBS-4PCS	F1 NUTS-17PCS

G1 SCREWS-17PCS	H1 ALLEN WRENCH-1PC	I1 CAM-TOOL-1PC
J1 SCREWS-2PCS	K1 SCREWS-2PCS	L1 POTHOOK-2PCS
M1 SCREWS-2PCS	N1  LOW PANEL-1PC	

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

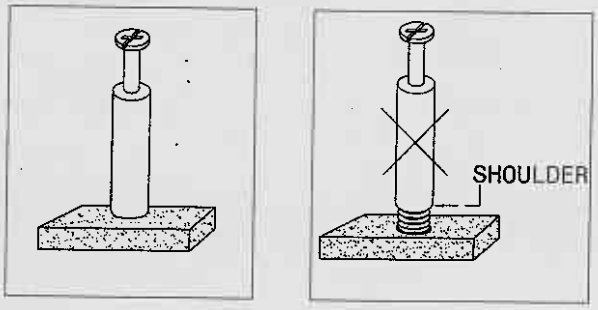

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

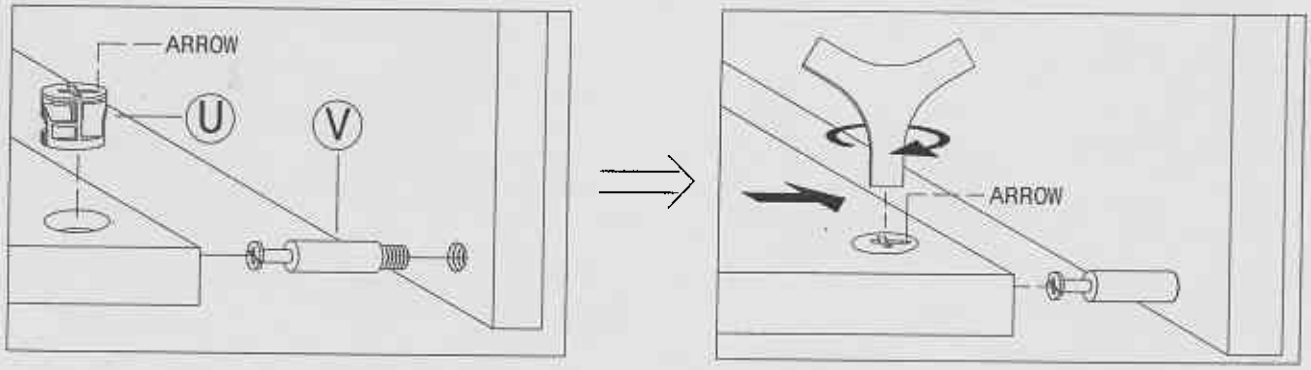

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

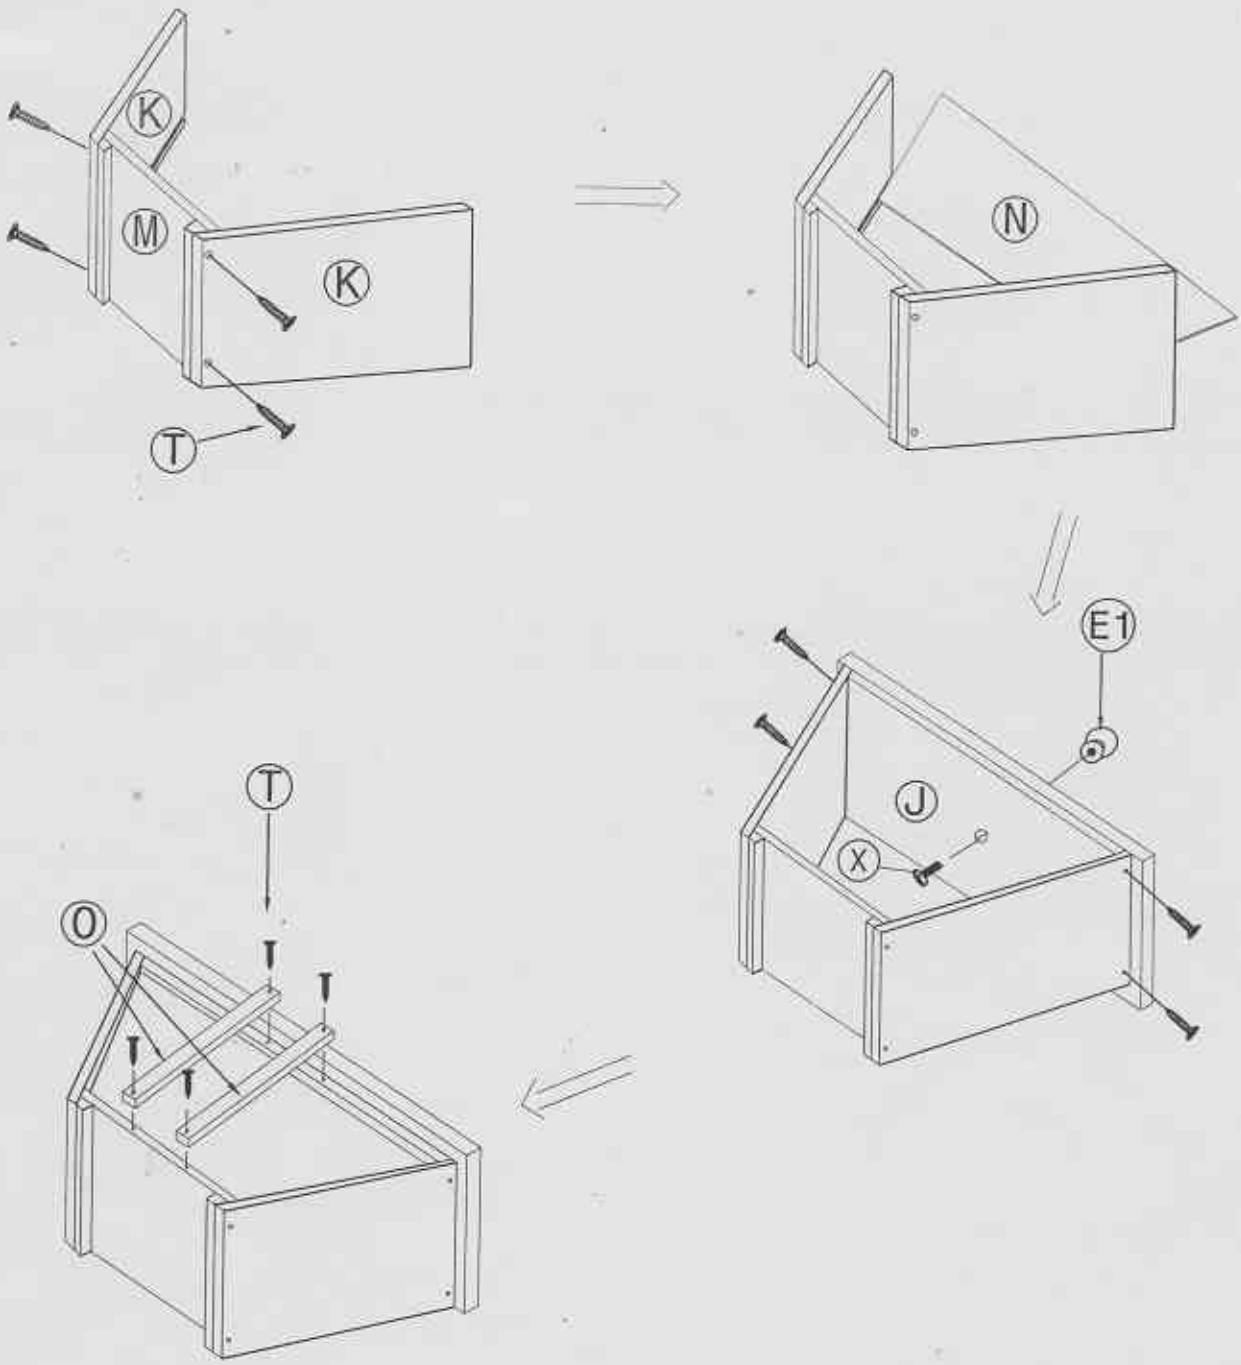

1). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL BACK(M)TO DRAWER PANEL SIDE(K)USING SCREWS(T).
- INSERT THE DRAWER PANEL BOTTOM(N) INTO SLOTS IN DRAWER PANEL SIDE(K).
- ATTACH DRAWER PANEL FRONT(J)USING SCREWS(T)AND ATTACH KNOB(E1)USING SCREWS(X).
- FINALLY,ATTACH DRAWER SLIDE(O)TO DRAWER PANEL BACK(M)/FRONT(J)AND USING SCREWS(T).

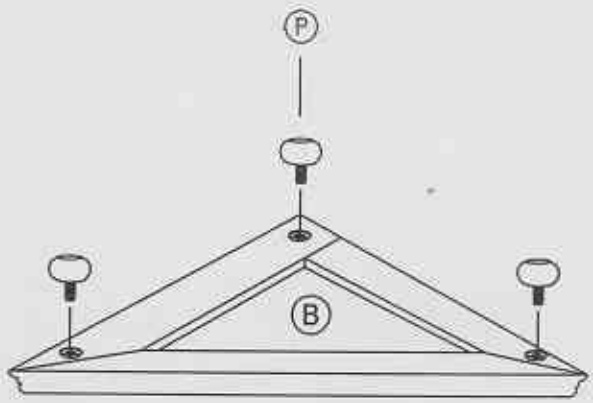

2). ASSEMBLE THE FEET(P).

- ROTATE THE 3 FEET(P)INTO HOLES IN BOTTOM PANEL(B).

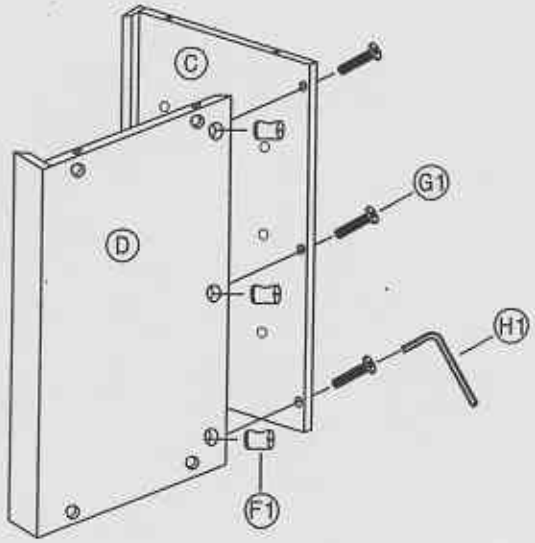

3). ASSEMBLE THE SIDE PANEL(C/D).

- INSERT THE 3 NUTS(F1)INTO HOLES IN SIDE PANEL(D).
- ATTACH THE LEFT SIDE PANEL(C)TO RIGHT SIDE PANEL(D)USING 3 SCREWS(G1).

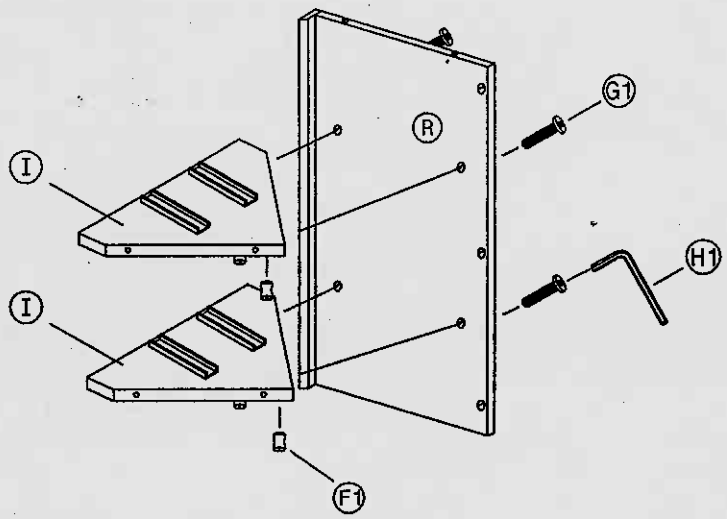

4). ASSEMBLE THE ACROSS PANEL(I).

- INSERT THE 4 NUTS(F1)INTO HOLES IN ACROSS PANEL(I).
- ATTACH THE LEFT SIDE PANEL(R)TO ACROSS PANEL(I)USING 4 SCREWS(G1).

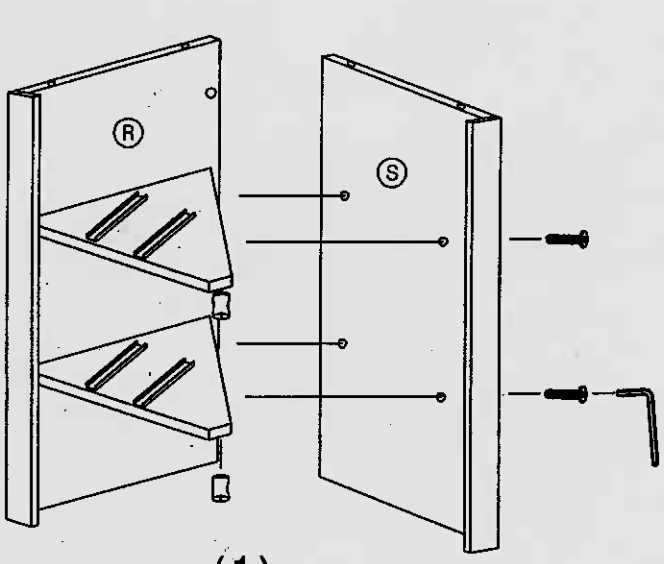

(1)

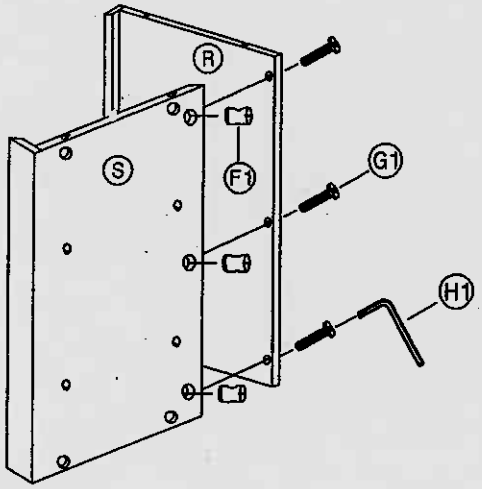

(2)

5). ASSEMBLE THE SIDE PANEL(S).

- INSERT THE 7 NUTS(F1)INTO HOLES IN ACROSS PANEL(I)AND SIDE PANEL(S).
- ATTACH THE RIGHT SIDE PANEL(S)TO ACROSS PANEL(I)USING 4 SCREWS(G1).
  ATTACH THE LEFT SIDE PANEL(R)TO RIGHT SIDE PANEL(S)USING 3 SCREWS(G1).

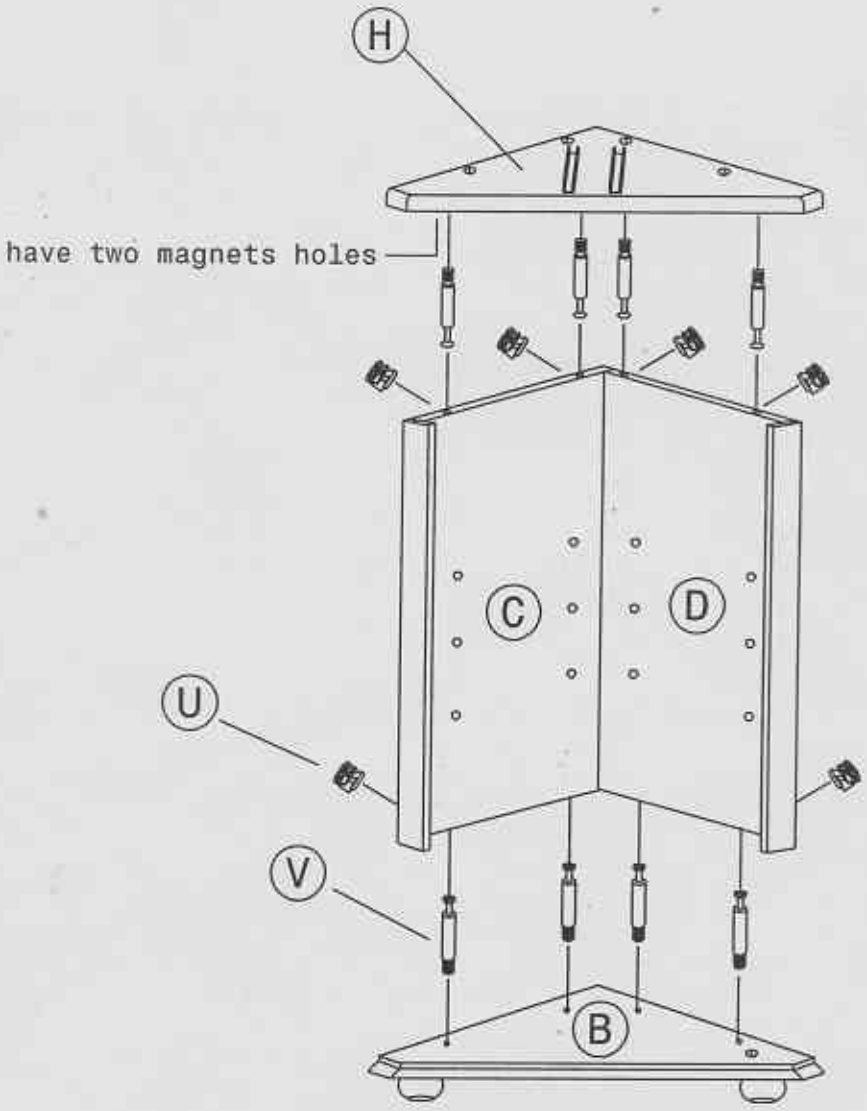

6). ASSEMBLE THE ACROSS PANEL(H).

- ROTATE THE 8 CAM-BOLTS(V)INTO HOLES IN ACROSS PANEL(H)AND BOTTOM PANEL(B).
- PLACE THE CAM-BOLTS(V)INTO HOLES IN SIDE PANEL(C/D)AND ATTACH USING CAM-LOCKS(U).

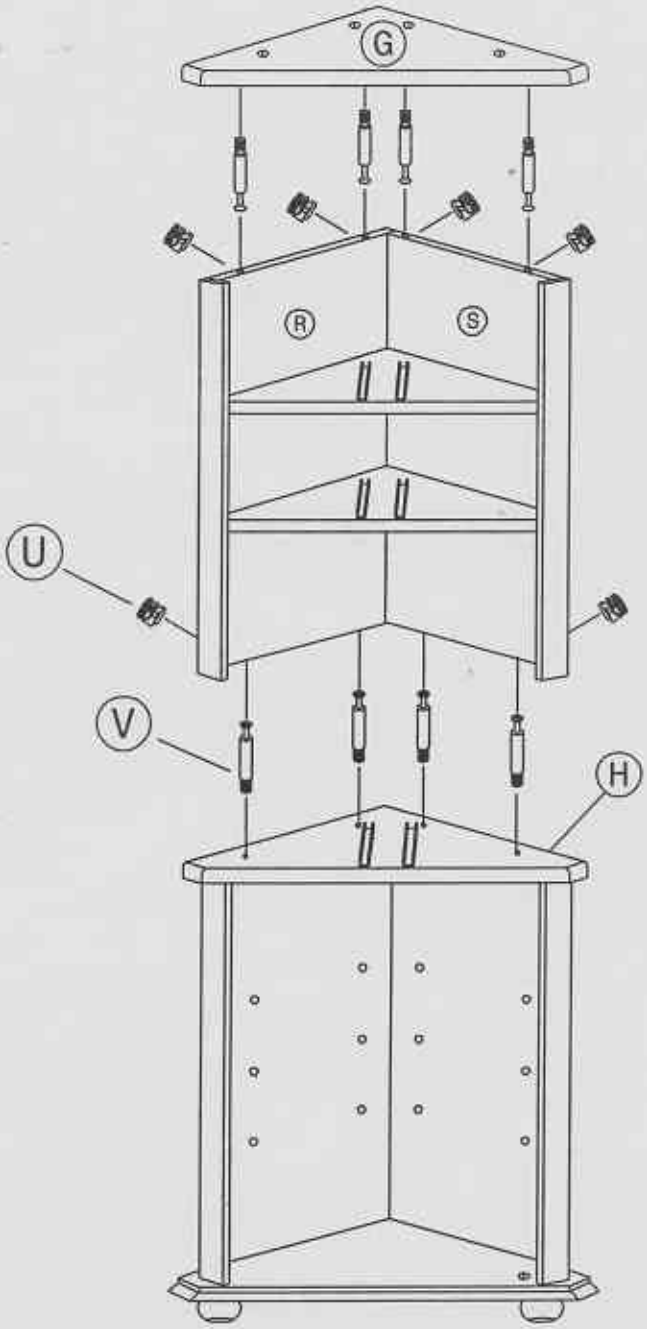

7). ASSEMBLE THE ACROSS PANEL(G).

- ROTATE THE 8 CAM-BOLTS(V)INTO HOLES IN ACROSS PANEL(G/H).
- PLACE THE CAM-BOLTS(V)INTO HOLES IN SIDE PANEL(R/S)AND ATTACH USING CAM-LOCKS(U).

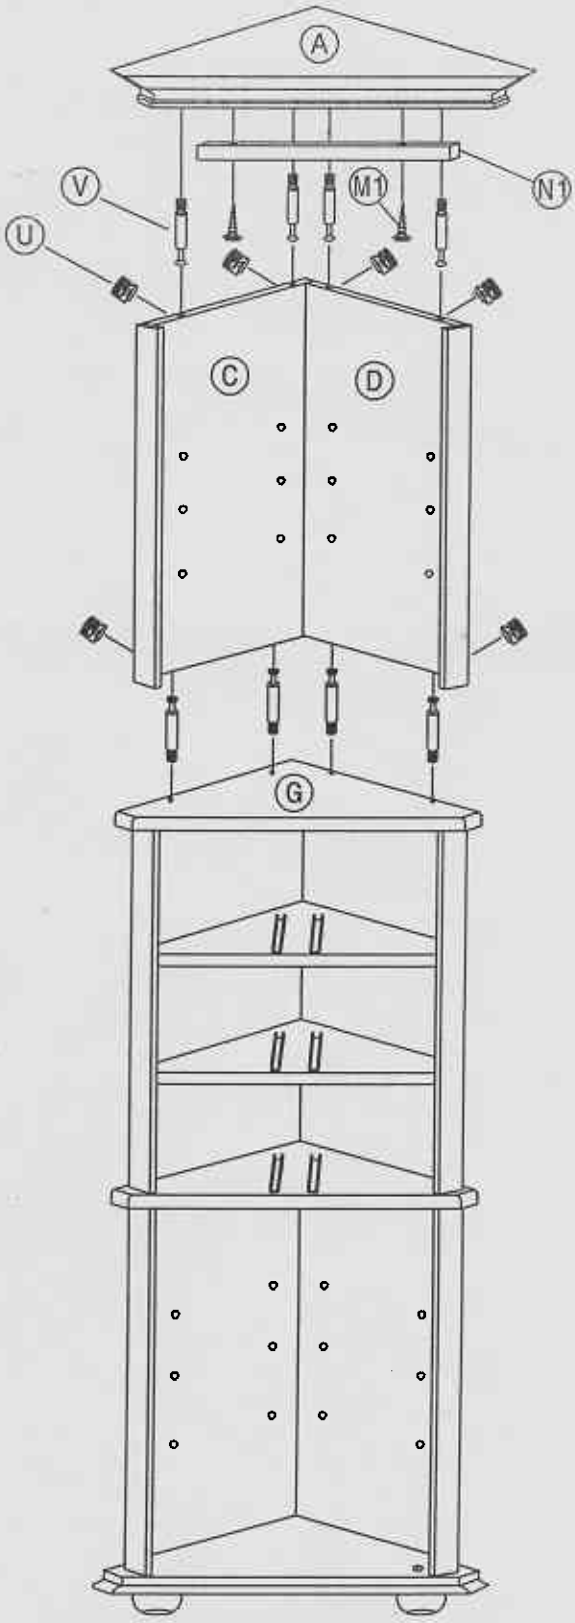

8). ASSEMBLE THE TOP PANEL(A).

- ATTACH THE LOW PANEL(N1)USING SCREWS(M1)IN HOLES OF PRIDRIL TOP PANEL(A).
- ROTATE THE CAM-BOLTS(V)INTO HOLES IN TOP PANEL(A)AND ACROSS PANEL PANEL(G).
- PLACE THE CAM-BOLTS(V)INTO HOLES IN SIDE PANEL(C/D)AND ATTACH USING CAM-LOCKS(U).

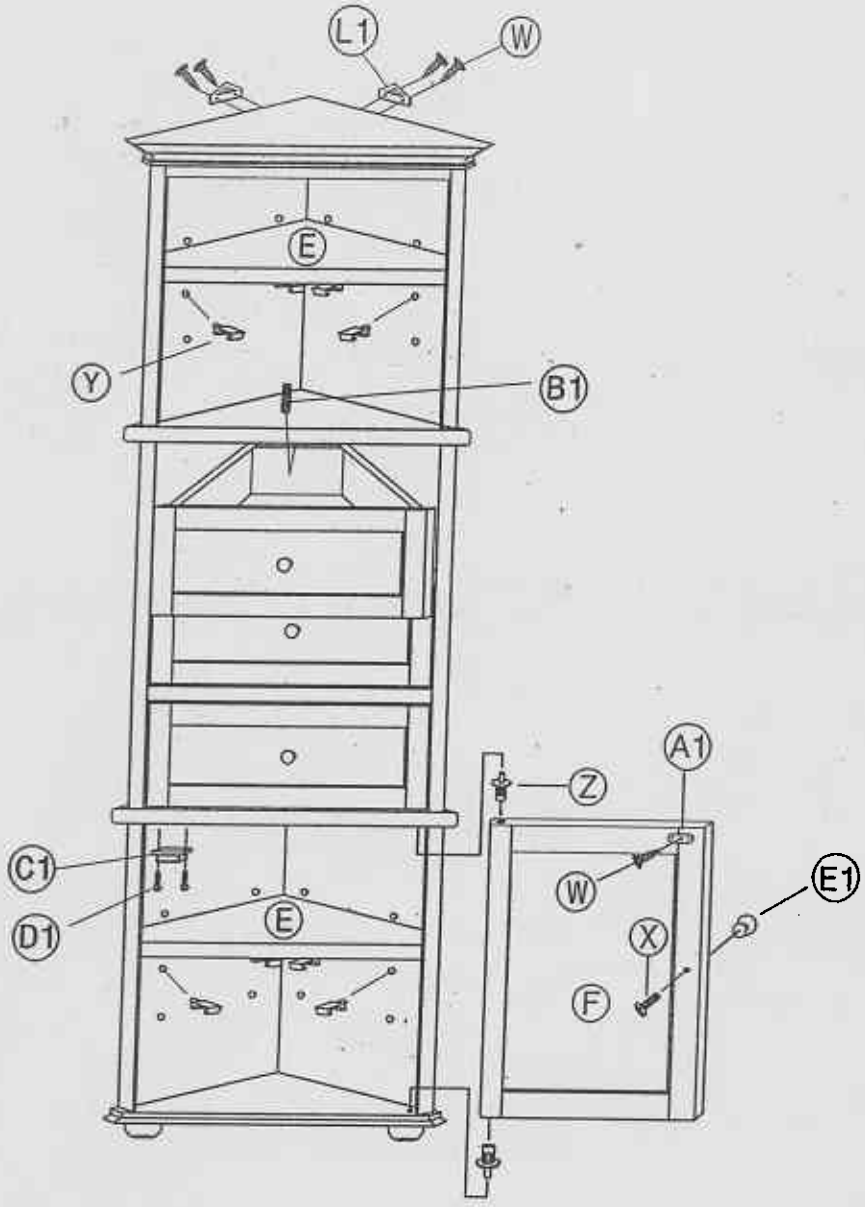

9). ASSEMBLE THE DOOR(F).

- ATTACH THE MAGBET(C1)USING SCREWS(D1)INTHE PREDRILLED HOLES OF PANEL(H).
- ATTACH THE FEMALE MAGNET(A1)TO DOOR(F)USING SCREWS(W).
- ATTACH THE KNOB(E1)TO DOOR(F)USING SCREWS(X).
- INSERT THE HINGES(Z)INTO HOLES IN DOOR PANEL(F)AND PANEL(B/H).
- INSERT THE SHELF SUPPORTS(Y)IN PANEL(C/D)AND PUT THE SHELF ONTO THEM.
- INSERT THE DOWELS(B1)INTO HOLES IN PANEL(G/I)AND SLIDE THE DRAWER INTO WOOD SLIDER.
- ATTACH THE POTHOOK(L1) IN HOLES OF PRIDRIL TOP PANEL(A)AND USING SCREWS(W).

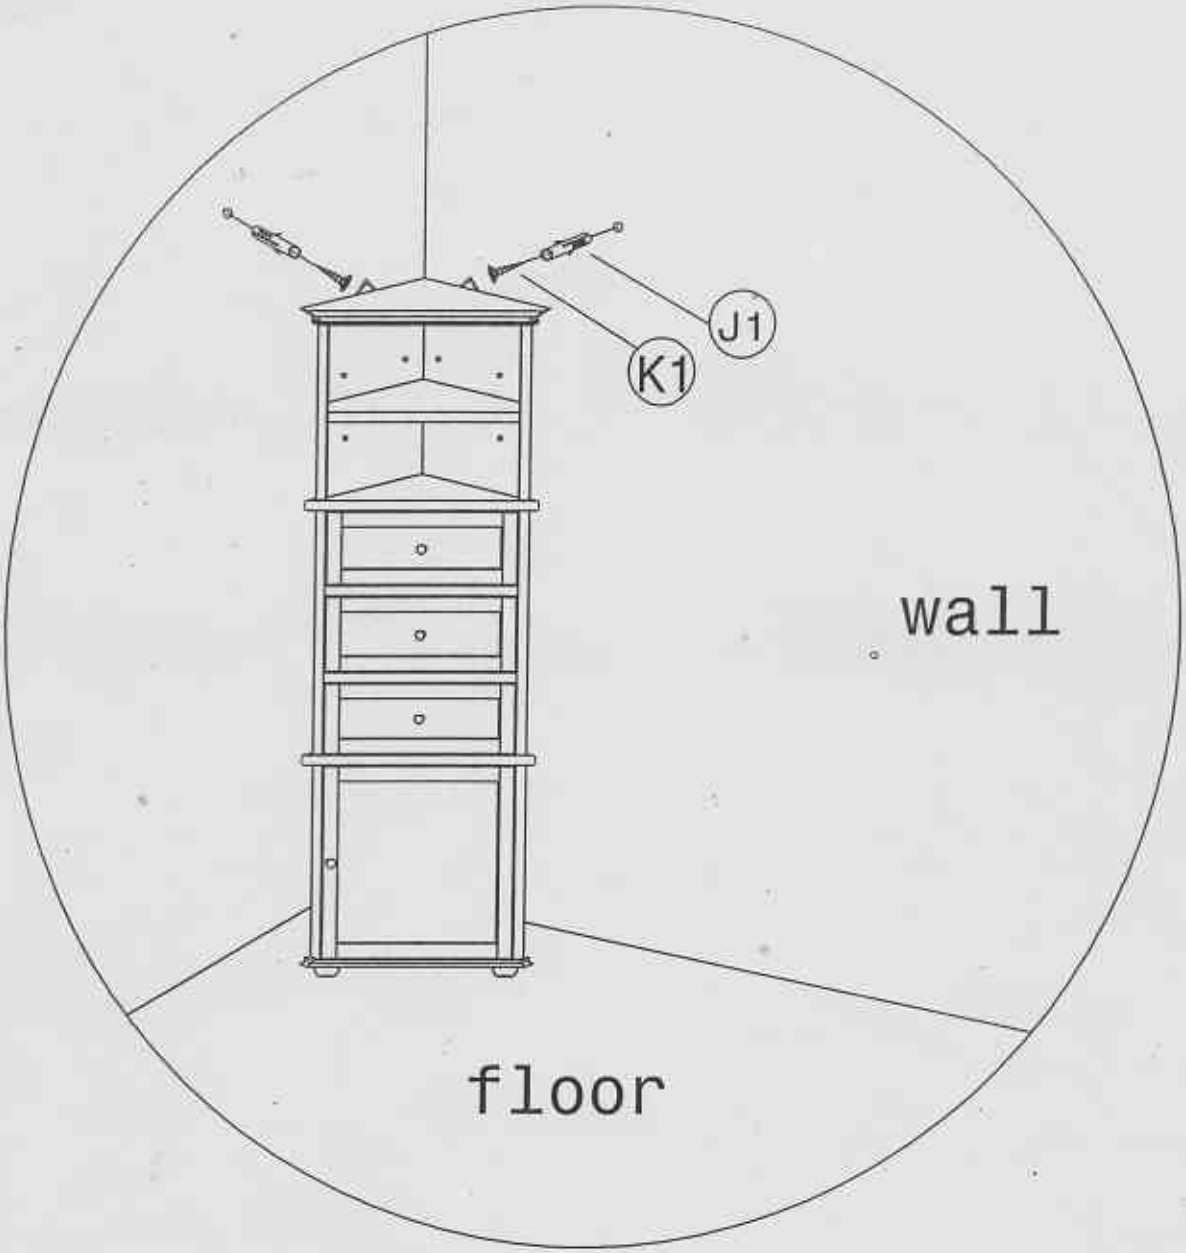

10) . ATTACH TO WALL

- DRILL TWO HOLES IN THE WALL EQUAL TO THE DISTANCE OF THE POTHOOK HANGERS.
- INSERT THE SCREWS(J1)INTO THE HOLES ON THE WALL,YOU MAY NEED A HAMMER.
- ROTATE 2 SCREWS(K1)INTO THE WALL SCREWS(J1)AND HANG ON THE WALL SCREWS.